


SOUND
SOUND
SOUND
SOUND
SOUND
SOUND

Kodak **EKTASOUND 130** movie camera

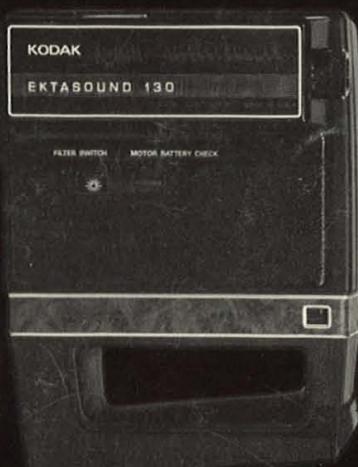

KODAK EKTASOUND 130 Movie Camera

Welcome to the world of sound movies that *you* make!

With your new camera and super 8 sound cartridges, you add the dimension of sound to your movies. Now your movies take on a new realism, the new excitement of sound, and a new and colorful depth as you record scenes as they actually happened. You can make sound movies in almost *any* kind of lighting without movie lights or separate recording equipment because your camera does it all!

It *simultaneously* records both the sound and the scene on the super 8 film within the camera. Whether at the racetrack or a concert, at a birthday party or graduation, you capture the sights and sounds of the moment as they happen, to share later with others.



Just as the camera's built-in electric exposure control automatically adjusts the lens for the amount of light existing in a scene, the camera's built-in recording mechanism *automatically* adjusts for the sound level. Merely plug in the microphone for easy sound movies.

As with any fine piece of equipment, it is important to become familiar with your camera and its operation by reading this manual *before* you use your camera. When you thoroughly understand the operation of your camera, read "sound-movie tips" on page 14 for ideas which will increase your enjoyment of sound movies.

After your sound movies are processed, project them on a super 8 magnetic-sound projector. Kodak super 8 sound projectors are described on page 16.

If you feel that you need help or advice on using your camera, please write to our staff of photographic experts at Eastman Kodak Company, Photo Information, Department 841, Rochester, New York 14650. (Should your camera ever require service, the warranty and instructions for obtaining service are printed at the back of this manual. There is additional helpful information in the Service Brochure packed with your camera.)

Fold out this page for reference as you read the manual.

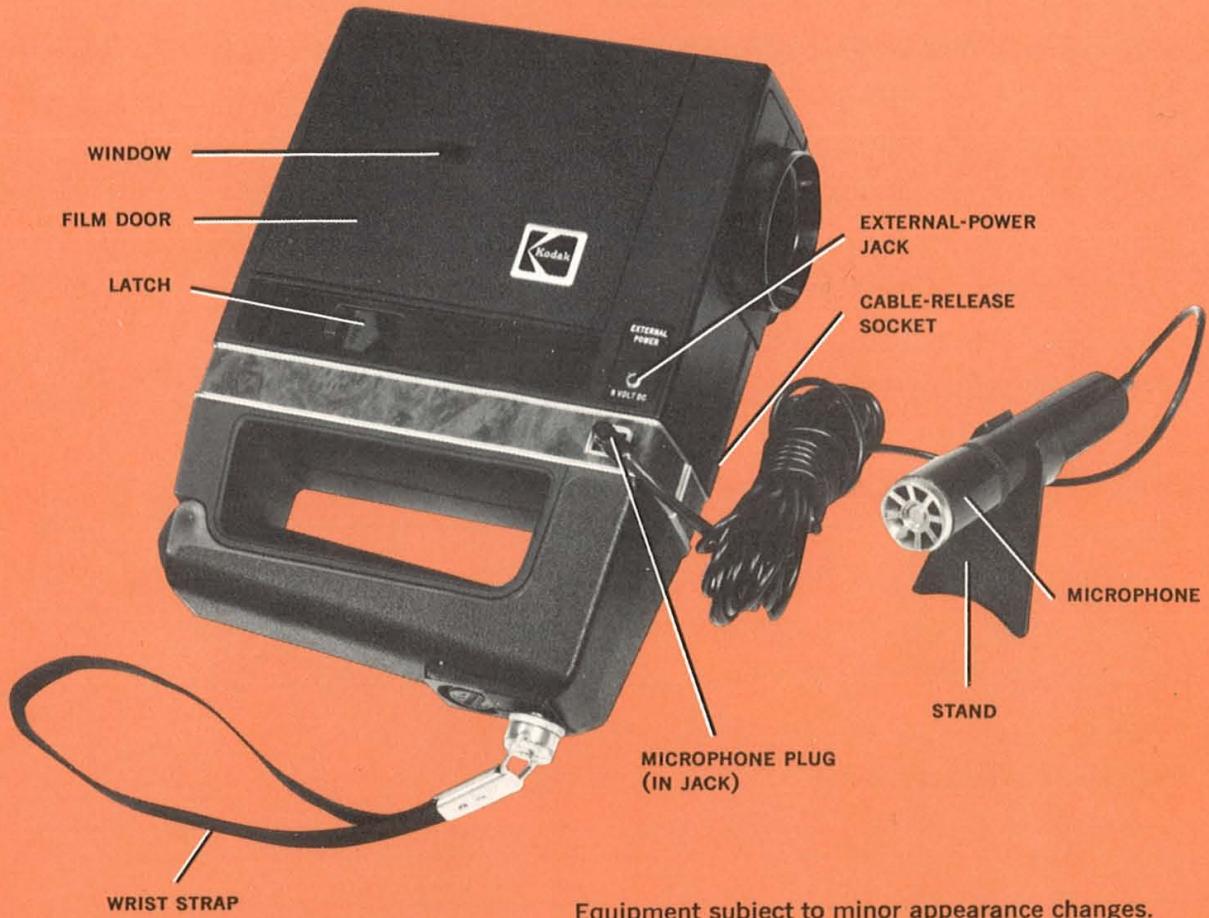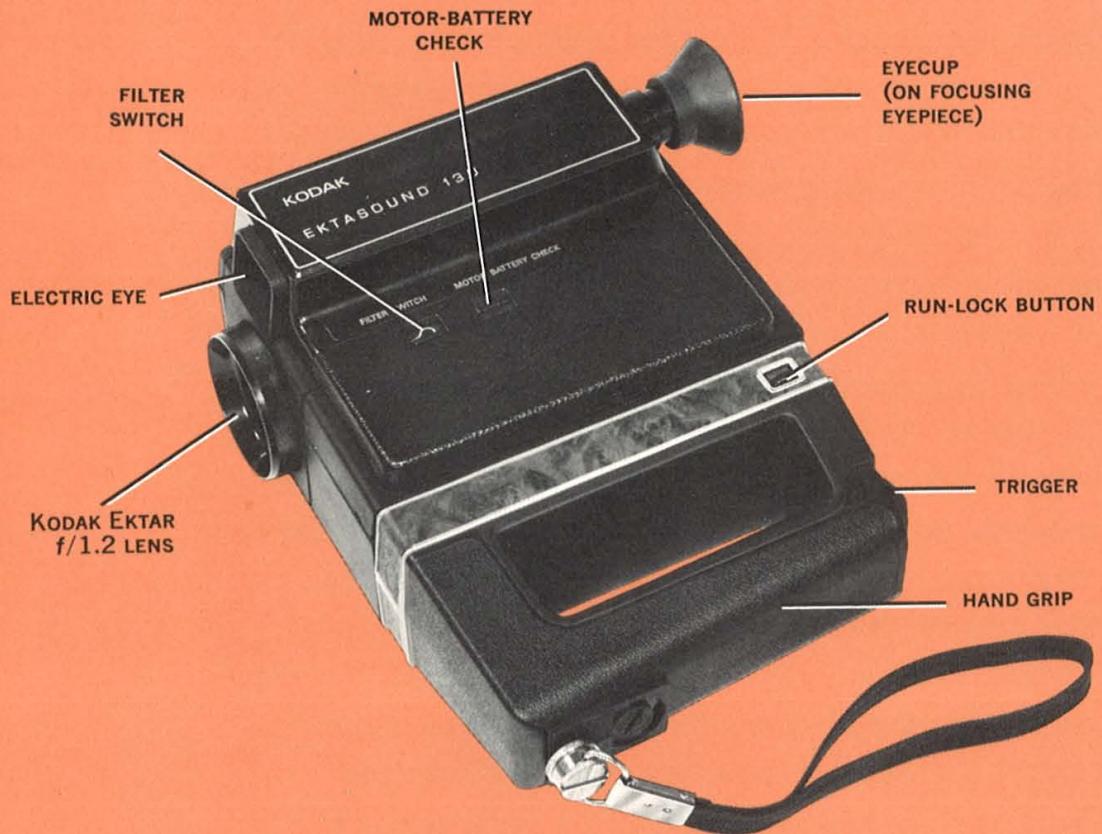

Equipment subject to minor appearance changes.

sound movies with your camera are easy...follow these basic steps

(Only brief instructions are given here. Read on for important details.)

1

After installing the six AA-size batteries and the 9-volt battery (page 2), open the FILM DOOR and insert a cartridge of super 8 sound film (page 6).



2

Fully insert MICROPHONE PLUG into microphone jack (page 10). *Place the microphone near your subject to avoid picking up unwanted sounds (at least 3 feet from camera and at least 1 foot from subject).*

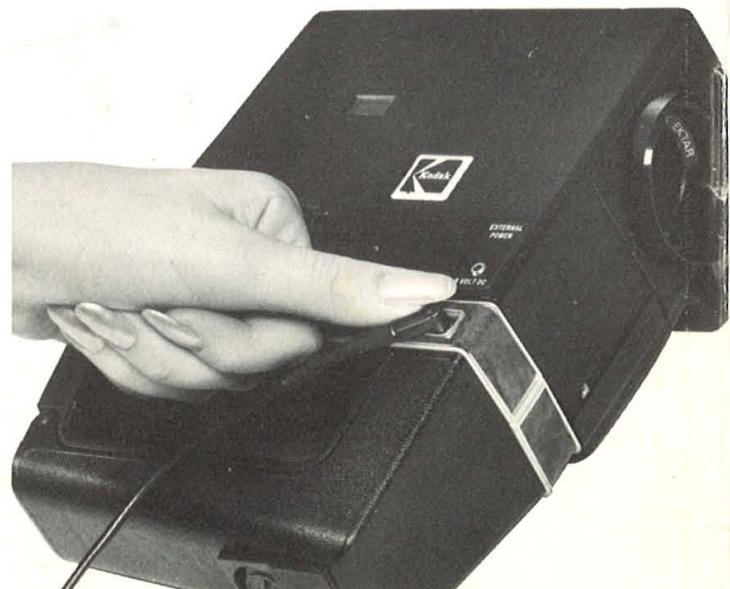


table of contents

introduction
serial number 1
wrist strap 2
eyecup 2
batteries 2
installing batteries 2
checking batteries 2
Kodak super 8 movie films 4
filter setting 4
loading the camera 6
holding the camera 8
viewfinder focus 8
nearness to subject 8
trigger 8
automatic exposure control 8
microphone 10
sound indicator 10
cable-release socket 10
daylight movies 10
existing-light movies 12
indoor movies with
movie lights 12


unloading the camera 12
film processing 13
camera care 13
cleaning lenses 13
cleaning film aperture 13
sound-recording
mechanism 13
tips 14
sound movies 14
scene length 14
panning 15
indoor movies 15
batteries 15
cold-weather operation 15
technical details 15
auxiliary equipment 16
service facilities IBC
warranty IBC

serial number

A serial number is stamped on the base of the HAND GRIP near the TRIGGER. Make a note of this number for your records.

3

Set the FILTER SWITCH at "Ⓐ" for regular light bulbs, or at "Ⓑ" for daylight and most other lighting conditions (page 4).

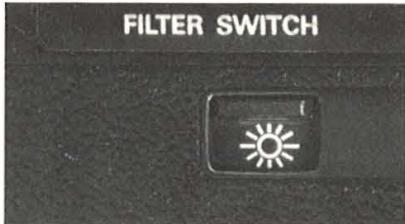

4

Frame your subject in the viewfinder (page 8). Slowly push in the TRIGGER—you're making sound movies. **For the most satisfactory movies, hold your camera still, except to follow moving subjects.**



wrist strap

A WRIST STRAP, provided for your convenience in carrying the camera, is supplied with your camera. Attach the strap to the tripod socket on the HAND GRIP after you install the batteries.

eyecup

A rubber EYECUP, which reduces extraneous light and helps position your eye at the center of the viewfinder, is supplied with your camera. If you wish to use the eyecup, snap it onto the viewfinder.

batteries

Your camera uses six AA-size, 1.5-volt *alkaline* batteries to power the drive motors and automatic exposure control, and one 9-volt *alkaline* battery (like those used in transistor radios) to power the sound amplifier. (Don't use zinc-carbon batteries except in an emergency, and then only when the temperature is above 55 F.) The batteries (supplied with outfits) are housed in the hand grip of the camera. At normal temperatures, the AA-size batteries will drive approximately 15 sound cartridges or up to 25 silent cartridges through the camera. (If the camera cools to temperatures below 32 F, allow the camera to warm up before you use it for sound movies, or insert a silent cartridge into the camera. For extended cold-weather operation, you can use an auxiliary battery pack to "boost" the motor batteries—see page 15.) Check the batteries periodically (see "checking batteries") and replace when necessary. *Be sure to use alkaline batteries whenever you install new batteries.*

installing batteries

To install the batteries, hold the camera with the hand grip up. (Remove the wrist strap.) Turn the coin-slotted screw counterclockwise and raise the BATTERY-COMPARTMENT COVER as shown to expose the battery compartment. Install the AA-SIZE BATTERIES with the "+" ends facing as shown on the label in the battery compartment. (If you install the batteries incorrectly, the motor will run slowly, backward, or not at all.)


Snap the connector onto the 9-VOLT BATTERY (it fits only one way); then push the battery into the opening just beneath the tripod socket. Lower the cover to its normal position and rotate the coin-slotted screw clockwise to secure the door.

checking batteries


The built-in battery checker permits you to check the AA-size batteries periodically. Look through the viewfinder as you press the button labeled MOTOR-BATTERY CHECK. **IMPORTANT: Don't hold the battery-check button longer than 5 seconds.** If the AA-size batteries are good, you'll see a blue light just below the viewfinder rectangle. (When the microphone is plugged into the camera, this light will flicker red as you make sound movies, indicating that the 9-volt battery is good. See page 10.)




WRIST STRAP

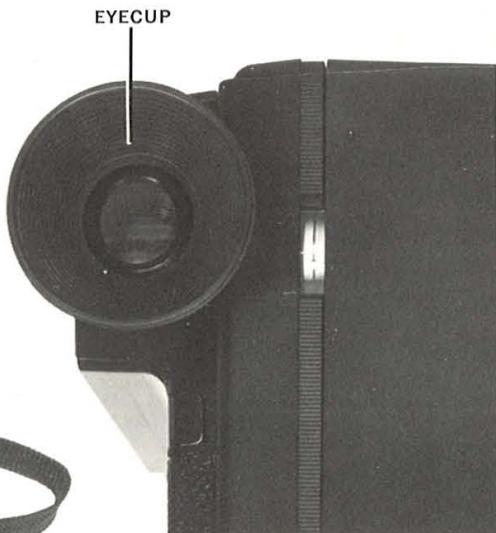

EYECUP

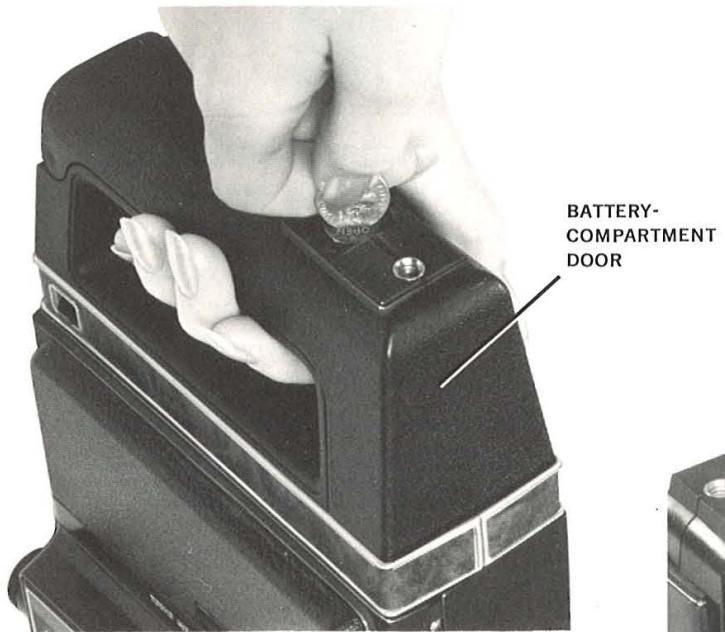


BATTERY-COMPARTMENT DOOR

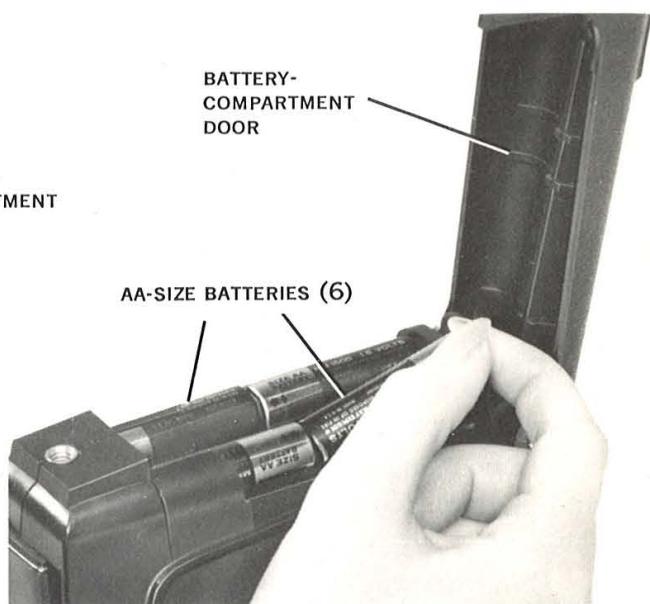


BATTERY-COMPARTMENT DOOR

AA-SIZE BATTERIES (6)

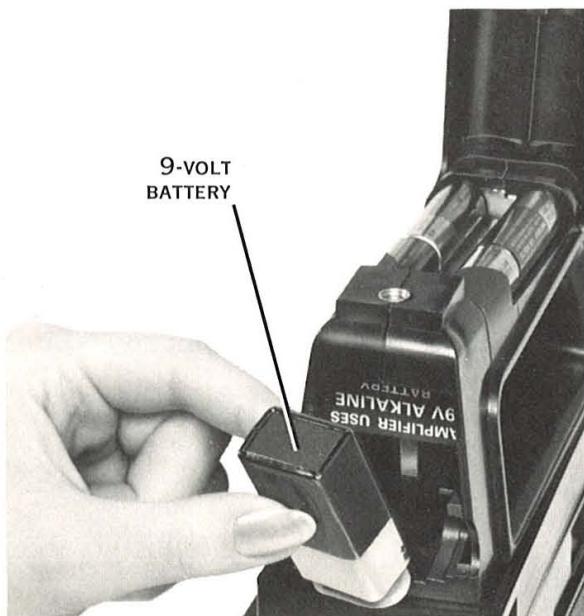

9-VOLT BATTERY

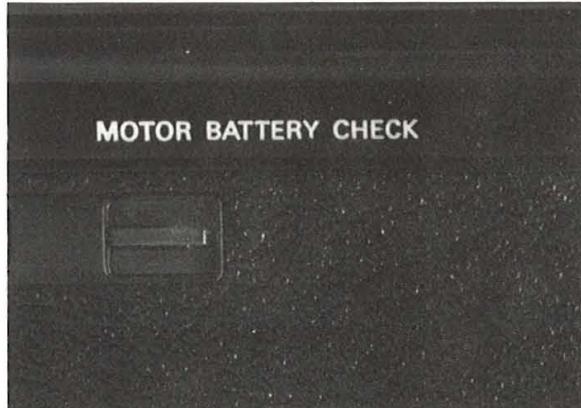

MOTOR BATTERY CHECK

Kodak super 8 movie films

Your camera uses sound or silent cartridges of movie film with speeds of ASA 40 or ASA 160. (A notch in the cartridge automatically adjusts the camera for the appropriate speed.) For daylight illumination, these speeds are reduced to ASA 25 or ASA 100 by a filter built into your camera. For regular light bulbs (tungsten illumination) the built-in filter can be moved out of position manually, or automatically by inserting a movie light into the slot on top of the camera.

Select a film from the table for the conditions under which you will be making movies. (The table gives examples of different light sources.)

If you have a sound cartridge in the camera and wish to add sound later (with a projector capable of recording sound), simply unplug the microphone from the camera. If you use a cartridge of silent movie film, the recording mechanism in your camera will not be activated. If you decide later to add a sound background, a sound stripe such as the KODAK SONOTRACK Coating can be added to your silent film. However, it will cost more than if you use a sound cartridge initially.


Don't carry unwrapped, unexposed film cartridges in your pocket or purse, because dust may accumulate on the film and appear as black specks on your movies.

Before making any especially important movies—on a trip or at some special event—expose a cartridge of film and check the results. This will give you practice in camera operation and will provide a check on your equipment. If you have any questions, your photo dealer will be glad to help.

filter setting



Regular light bulbs, flames, floodlights, movie lights, other tungsten-light sources

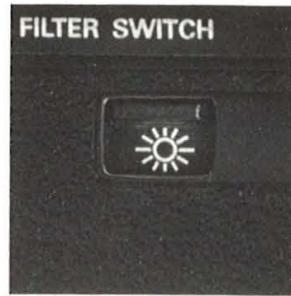

Daylight, fluorescent light, carbon-arc spotlights

If you're not sure of the type of light, set the switch to "※." If more than one kind of light exists in a scene, set the filter switch for the predominant light source. In some situations the use of the camera filter is a matter of personal taste. Movies made with the filter switch at "※" will appear "warmer," or more red-yellow, than those made without the filter. If in doubt, set the filter switch to "※."

IMPORTANT: Store your camera and film away from heat and direct sunlight—never in the glove compartment, on the rear-window shelf, or in any other "hot spot" in a car.

	KODAK Films	Film Speed	Filter Switch	Light Sources
color movies	EKTACHROME 160 Sound Movie Film (Type A)	ASA 100 (with built-in filter)		Daylight, fluorescent, carbon-arc spotlight, or other
	EKTACHROME 160 Movie Film (Type A)	ASA 160 (no filter)		Existing tungsten light, fireworks, flames, floodlight, bounce movie light (3400 K)
	KODACHROME II Sound Movie Film (Type A)	ASA 25 (with built-in filter)		Daylight
	KODACHROME II Movie Film (Type A)	ASA 40 (no filter)		Movie light (3400 K)
special-purpose black-and-white movies	EKTACHROME 40 Movie Film (Type A)*	ASA 25 (with built-in filter)		Daylight
		ASA 40 (no filter)		Movie light (3400 K)
	TRI-X Reversal Film 7278*	ASA 200 (no filter†)		Daylight
		ASA 160 (no filter)		Existing tungsten light, bounce movie light (3400 K)
Plus-X Reversal Film 7276*		ASA 25 (with built-in filter)		Daylight
		ASA 40 (no filter)		Movie light (3400 K)

*Only silent cartridges available.

†Cartridge automatically moves filter out of light path; exposure is at ASA 160.

loading the camera

1 Slide the film-door LATCH as far as it will go toward the front of the camera. The latch has two functions—the first movement releases the film door and the second movement lifts the cartridge slightly for easy removal. Open the door to the position shown; **don't force it beyond this position.**


2 Slip a super 8 cartridge of film (sound or silent) into the camera, tilting the cartridge as shown. Push on the rear of the cartridge until it snaps into place. With sound cartridges, the sound-recording mechanism is automatically activated.

IMPORTANT: Don't move the film in either the picture aperture or sound-recording opening or you may cause the cartridge to jam, making it unusable. Don't operate the camera when the door is open and a cartridge is in place.

3 Close the film door and press on its lower rear corner to secure the door. (The camera will not operate properly if the door is not closed.) The film-type designation will appear in the WINDOW in the film door.

4 The FILM-SUPPLY INDICATOR is marked like a gas gauge ("1-3/4-1/2-1/4-0"). As you make movies, the indicator moves to show you how much unexposed film remains. For example, when the indicator is at $\frac{3}{4}$, you have exposed approximately $12\frac{1}{2}$ feet of film and have approximately $37\frac{1}{2}$ feet of unexposed film remaining.

NOTE: We don't recommend removing a cartridge of film before it is completely exposed because you will fog approximately 6 inches of film and the film-supply indicator will return to "1" (see "unloading the camera," page 12).



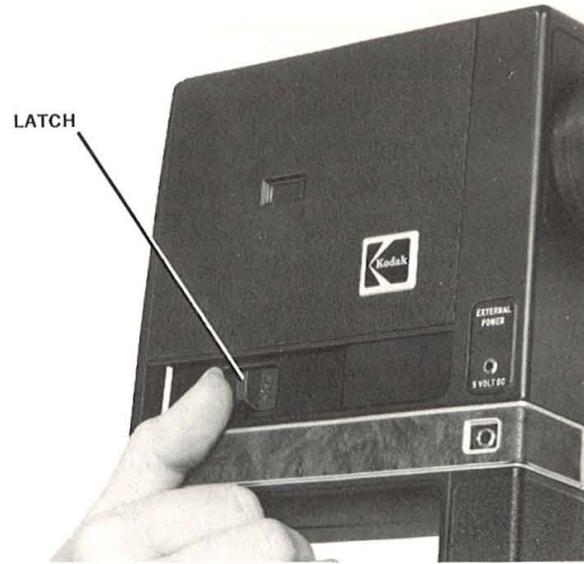


SOUND CARTRIDGE



SILENT CARTRIDGE



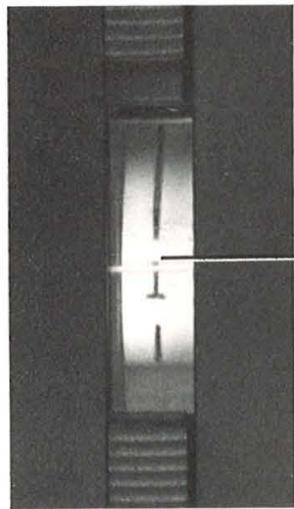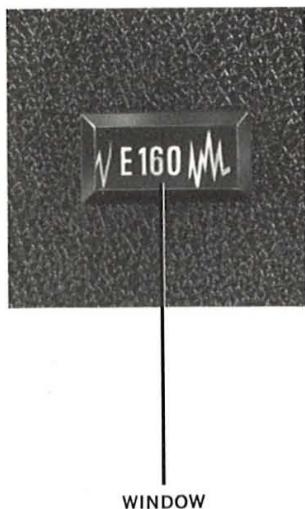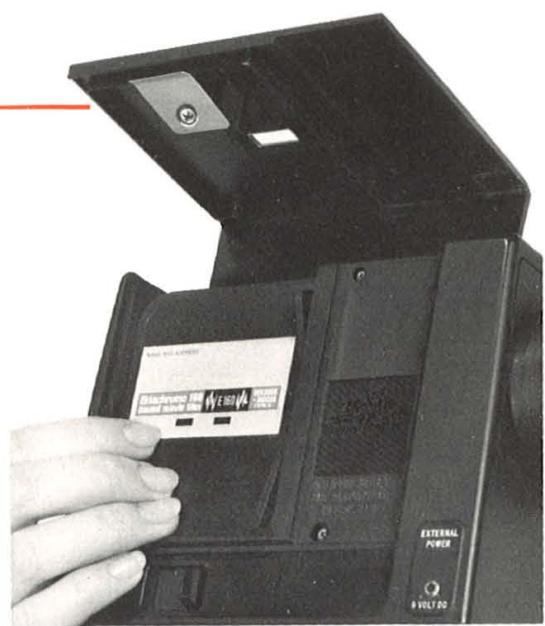

FILM-SUPPLY
INDICATOR

holding the camera

Place either hand on the HAND GRIP so that your thumb falls on the TRIGGER. Cup your other hand over the top of the camera, being careful not to cover the lens or the electric eye. Bring the camera up to your eye and hold the camera in a comfortable position where you can see through the viewfinder clearly. The scene you see in the finder is about the same as that which will be projected on the screen after the film is processed.

At close distances, the viewfinder and taking lenses don't "see" quite the same view because they are separated. This effect, called "parallax," is especially noticeable in close-ups. To correct this when you are making movies 8 feet or closer, position your subject slightly below and to the right of center in the finder to avoid cutting off part of your subject in the film.

viewfinder focus

By rotating the viewfinder focus eyepiece, you can focus the finder for your individual eye characteristics. Look through the viewfinder and rotate the eyepiece until the image is sharp. (This will focus only the viewfinder image.)

nearness to subject

The 9mm, f/1.2 KODAK EKTAR Lens in your camera is factory-set for sharp movies at normal distances. However, the subject must be no closer to the camera than the recommended distance. In bright sunlight, move in as close to your subject as 3½ feet when using film with a daylight speed of ASA 25, such as KODACHROME II Movie Film (Type A); and as close as 2 feet when using film with a daylight speed of ASA 100, such as KODAK EKTACHROME 160 Movie Film (Type A). *When the sun isn't shining brightly, or indoors with existing light, stay about 8 feet from your subject.*

trigger

The trigger is located at the rear of the hand grip. Holding the camera as described earlier, your thumb will fall naturally on the trigger. While making movies, be sure to push the trigger in completely. You can lock the trigger to avoid accidental running of the camera, wasting film and battery power. Push the RUN-LOCK BUTTON to LOCK.



To run the camera continuously, press the trigger in as far as possible; then slide the run-lock button to "lock." To stop the camera, slide the button to the "run" position. If you want to be in the movie, place the camera on a tripod and set the camera to run continuously.

automatic exposure control

To help you get well-exposed movies, the lens opening is automatically controlled by the amount of light reflected by the scene to the ELECTRIC EYE. Therefore, don't obstruct the electric eye during movie-making by covering it with your fingers or any other object, and don't point the camera directly toward the sun or other bright light source.

As you look through the viewfinder, you will see a small round spot located *below* the viewfinder rectangle; this is the *low-light* signal. When you start to make movies, partially depress the trigger, pausing for a moment to allow the automatic exposure control to adjust for the lighting conditions. (The first movement of the trigger energizes the exposure control, and further depression starts the camera motor.) If there is a low-light condition, the spot will turn blue. (It may also flicker red—see "sound indicator," page 10.)

NOTE: The blue light may come on momentarily as the exposure control adjusts for the lighting conditions. The light will also come on when the motor-battery check button is pressed and the AA-size batteries are good.

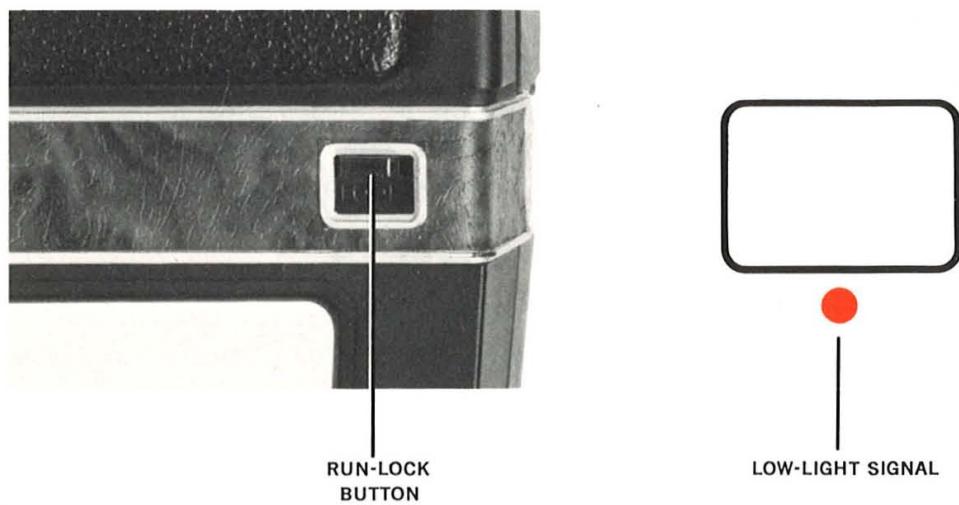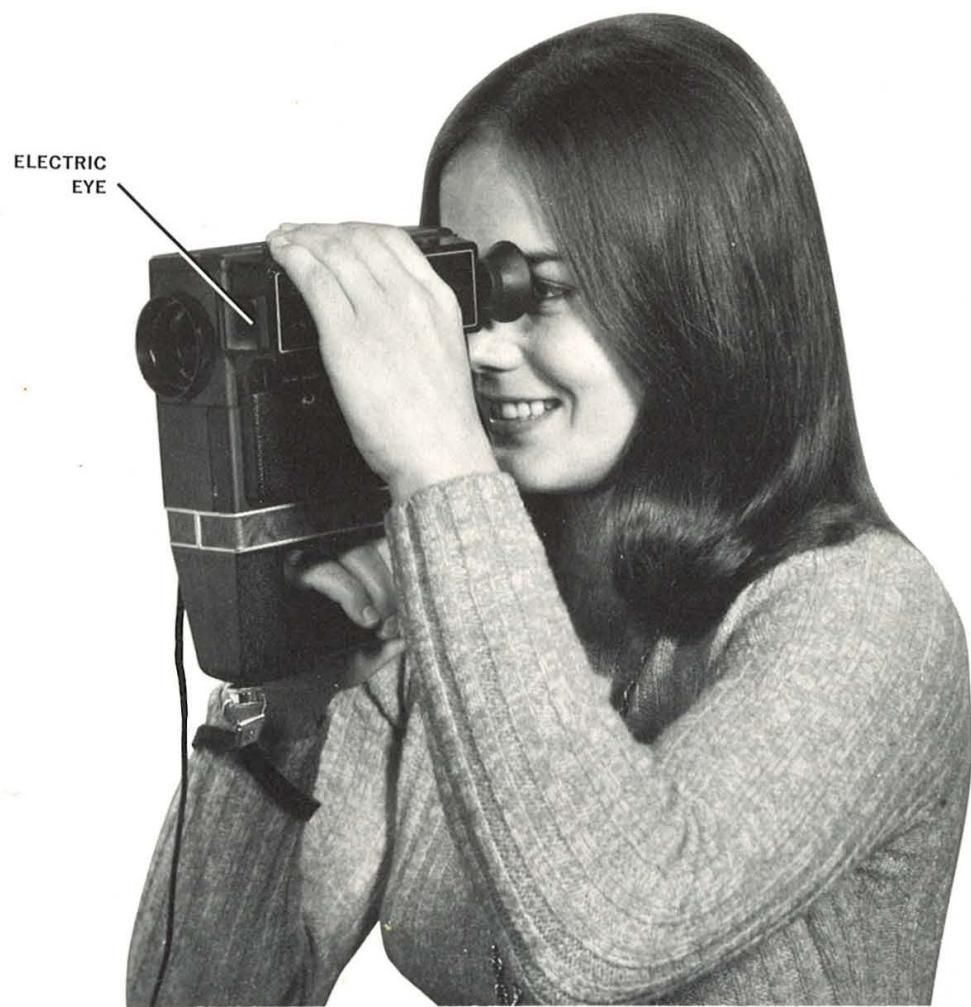

microphone

For good sound movies, microphone placement is extremely important! If you stop and listen carefully, you will hear sounds that your senses normally ignore. For example, when you are reading, you may not hear the television set in the next room or the airplane passing overhead. *But your camera will "hear" and record these sounds.* So, place the microphone near your subject for the best sound pickup, but at least 3 feet from the camera to minimize pickup of camera sounds. *Remember, the loudest sound (whether background noise or someone speaking loudly near the microphone) will control the recording level.*

Plug the microphone into the MICROPHONE JACK. With a sound cartridge in the camera and the microphone plugged in, you are ready to make sound movies. The automatic gain control (AGC) will adjust the recording level *automatically.* (To use a microphone other than the one supplied, select one with an impedance from 200 to 600 ohms.)

The supplied microphone is sensitive from all directions (omnidirectional) and to handling noises. So, locate the microphone near your subject *and leave it there while filming the scene.* (Perhaps you can conceal the microphone near your subject.) Don't rub or handle the microphone roughly during recording, and don't place it on the camera support. The STAND supplied with the microphone permits you to place it on a table or other flat surface.


If you wish to narrate a scene while filming, hold the camera up to your eye with one hand as you firmly hold the microphone off to the opposite side (as far as possible) with your other hand. The recording level will be adjusted by your voice, thus minimizing the sounds of the camera on the sound track.

NOTE: If the camera stops running while the trigger is pressed, check the batteries.

sound indicator

A SOUND INDICATOR is built into your camera. This indicator flickers red while making movies if these four conditions occur: (1) a sound cartridge is in the camera, (2) the microphone is plugged *correctly* into the camera, (3) the 9-volt alkaline battery is good, and (4) there are sounds in the scene you are filming. If the indicator does not appear while making sound movies, check these items. (This light may also appear red, blue, or purple if you are making movies in low-light levels.)

SOUND INDICATOR
(LOW-LIGHT SIGNAL)

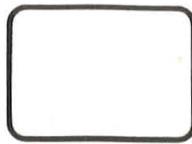

NOTE: The indicator may flicker momentarily even if the microphone is not plugged into the camera.


cable-release socket

A cable-release socket, in the front of the camera, enables you to run the camera remotely. To use this feature, mount the camera on a tripod and screw a cable release into the socket.

daylight movies

For bright color movies, your subject should be either entirely in bright or hazy sunlight with the sun approximately behind you, or entirely in the shade (not partially in each). Set the filter switch to "☀."

- 1 For sharp movies, keep at least as far away from your subject as suggested in "nearness to subject," (page 8).
- 2 Compose your picture in the view-finder. Be sure that nothing obstructs the lens or the electric eye.
- 3 Hold the camera steady and make movies by firmly pushing in the trigger. To stop making movies, release pressure quickly.

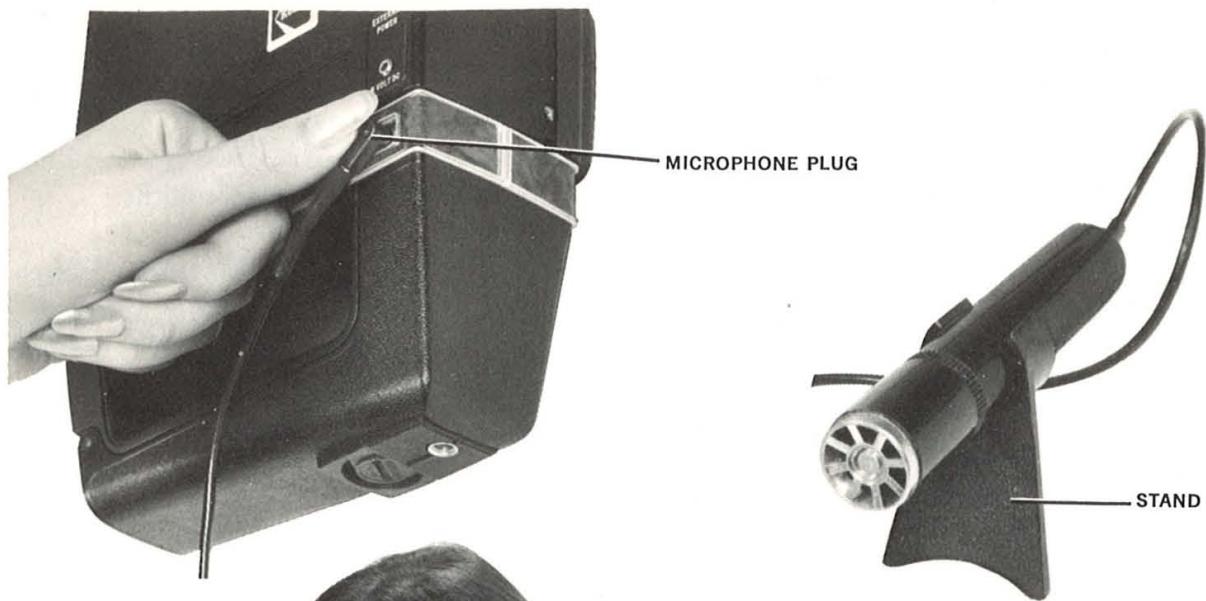

The *optional* KODAK EKTASOUND Movie-Making Case provides an easy way for you to handle the camera and microphone while making sound movies. The microphone, secured in the case, is far enough from the camera to minimize sounds of the camera in your movie. See "auxiliary equipment," page 16.

existing-light movies

Low-level existing light is the light found in homes, schools, churches, and stage shows; outdoors at night, and in lighted street scenes or scenes including illuminated buildings after dark. This includes daylight indoors and artificial light which exists in a scene.

Your camera, loaded with KODAK EKTACHROME 160 Movie Film (Type A), is designed for making movies with existing light. You can make movies indoors with the light existing in a typical living room, at stage or ice shows, or in any similarly lighted surroundings. The automatic exposure control automatically adjusts the lens opening for the amount of light.

For movies of subjects illuminated by regular light bulbs (tungsten light), set the filter switch to the "O" position. (For other types of lighting, such as fluorescent, carbon-arc spotlights, or daylight indoors, the switch should be set to the "S" position. When there is more than one type of light and you aren't sure which type is strongest, set the switch for daylight, "S.")

When the low-light signal appears, the lens opening is at its maximum. You can continue to make movies with the signal on and your movies will be somewhat darker than normal, but acceptable in most instances. (If your subject is spotlighted against a dark background, the camera's automatic exposure control will adjust for the dark background and your subject may appear light in your movie.)

When making movies with existing light, avoid any unusually bright light sources facing toward the camera. Otherwise, the camera's automatic exposure control will adjust for the bright light and your subject may appear dark in your movie.

Be certain to set the filter switch to "S" before making daylight movies.

indoor movies with movie lights


You can also use a movie light with your camera if you desire. See your photo dealer for a suitable movie light.

CAUTION: For the safety and comfort of your subjects, read the manufacturer's instructions carefully before using any movie light.

unloading the camera

When the film-supply indicator approaches the "0" position, you are nearing the end of the film. A pointer will appear at the top right of the viewfinder rectangle when there is approximately three feet of film remaining to be exposed. Listen very carefully as you continue to operate the camera until you hear the sudden "free-running" sound of the camera mechanism. The pointer should be at the right center of the viewfinder and the film-supply indicator will be at "0," indicating the cartridge is fully exposed. Open the film door and remove the cartridge. (Slide the latch all the way forward to raise the cartridge for easy removal.) The word "EXPOSED" appears on the film in the picture aperture of a fully exposed cartridge.

Never open the cartridge or manually advance film into the cartridge, or you may cause the cartridge to jam.

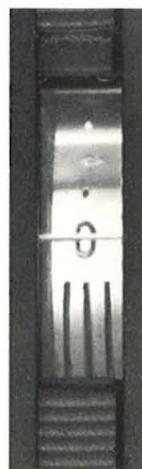

NOTE: We feel that it is better if you don't remove partially exposed cartridges because some "light-fogging" of the film will result in the picture aper-

ture and sound opening of the cartridge. In addition, when a *partially exposed* cartridge is placed in the camera, the film-supply indicator will be at "1," indicating a "full" cartridge.

However, if you choose to remove the film cartridge before it is fully exposed, be sure to run the camera for 1 or 2 seconds to advance your scenes beyond the sound opening in the cartridge to avoid spoiling any scenes. Note the setting of the film-supply indicator *before* you remove the cartridge. Mark this setting on the cartridge so that it will appear in the window. When you re-insert this cartridge into the camera, subtract the marked setting from "1" to determine the setting at which the cartridge will be fully exposed. For example, if the marked setting is "3/4," make movies until the indicator is at "1/4." (Listen very carefully for the sudden "free-running" sound of the camera mechanism when the indicator approaches "1/4.") This gives you a fully exposed film cartridge, but the end-of-film pointer will not appear in the finder.


film processing

You can have your film processed as follows: (1) Take the exposed super 8 film cartridge to your dealer, who will arrange for processing (specify the processor, if you desire); or (2) You can mail your exposed cartridge of Kodak color movie film to a Kodak laboratory (Kodak doesn't process black-and-white film) if you purchase the appropriate KODAK Prepaid Processing Mailer from your photo dealer and then send the exposed film cartridge directly to a Kodak laboratory according to the instructions on the mailer. The Kodak laboratory will mail your processed film directly to any address you specify.

camera care

cleaning lenses—The picture-taking lens and the viewfinder lenses are built into the camera and cannot be removed for cleaning. Clean the protective glass in front of the front viewfinder lens and the picture-taking lens by first blowing away any dust or grit from the surfaces; then gently wipe the surfaces with a clean, soft, lintless cloth. If necessary, use KODAK Lens Cleaner on the cloth. Clean the rear viewfinder lens by first blowing away any dust from the surface; then gently wipe the surface with a clean, soft, lintless cloth.

cleaning film aperture—Clean the FILM APERTURE in the camera frequently to prevent buildup of dust at the aperture. Open the film-compartment door; then, while holding the camera up so that dust will not fall onto the rear of the lens, use a small, soft brush to clean the aperture. Remove any dust in the film compartment.

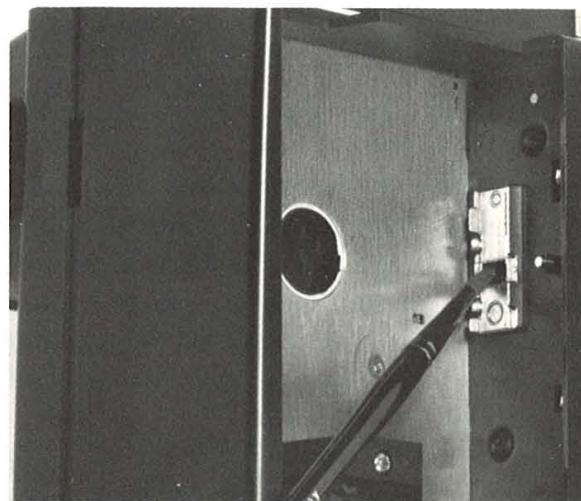

sound-recording mechanism—As the film passes the sound-recording mechanism, it "wipes" away any dust or dirt. Therefore, you don't need to clean the sound-recording head in your camera.

tips

1. sound movies—With the added dimension of sound, there are many new techniques for you to use. If you already own or have used a tape recorder, you probably are familiar with techniques for good sound recordings. Many of these same techniques can help you make good sound movies.

If you notice that the sound indicator light is on constantly (not flickering) while you are making sound movies, the background noise level may be too high. Turn off any radio or television set (or other appliance) operating in the background. Then position the microphone equidistant from your subjects so that one subject doesn't predominate over the others (especially important with musical instruments). This enables the automatic gain control (AGC) to adjust the recording level for your subjects.

For the best continuity in your movies, keep the camera centered on your main subject, even though another person may be speaking. This will avoid quick, confusing, and distracting scene changes.


The area where you record can influence the sound quality of your movies. Rooms with carpeting and heavy draperies help deaden echoes, thereby improving the quality of recorded sound. Outdoors, be sure that you place the microphone near your prime subject so that wind, traffic, or other background noises will be reduced.

Handling of the microphone during

recording will produce excessive, distracting noises on the sound track. Once you determine a position for the microphone in a specific scene, leave it there until you change scenes. Use an extension cord (available from your photo dealer) for the microphone if the camera position will be limited by the length of the microphone cord.

The sound recording is placed onto the film 18 frames ahead of the picture. To avoid sounds from one scene being played with an adjacent unrelated scene, run the camera about 2 seconds *before and after* your subjects' actions. This compensates for the 1- to 2-second delay of sound at the beginning of each scene and makes editing your sound movies much easier.

2. scene length—With sound movies, the scene length will probably be controlled by your subject's dialogue or other significant sounds. With silent movies, about 5 to 10 seconds of filming time (approximately 1½ to 2½ feet of film) is appropriate for movie scenes of average action. Give your movies an interesting change of pace and make them more fun to see by making some scenes longer than others. So decide how long you want the scene to be on the screen, and expose the film for that length of time. Some scenes need to be long, some medium in length, and some short. For example, an overall shot of a beach to establish location may last only a few seconds, but the more interesting close-ups may deserve a much longer time.

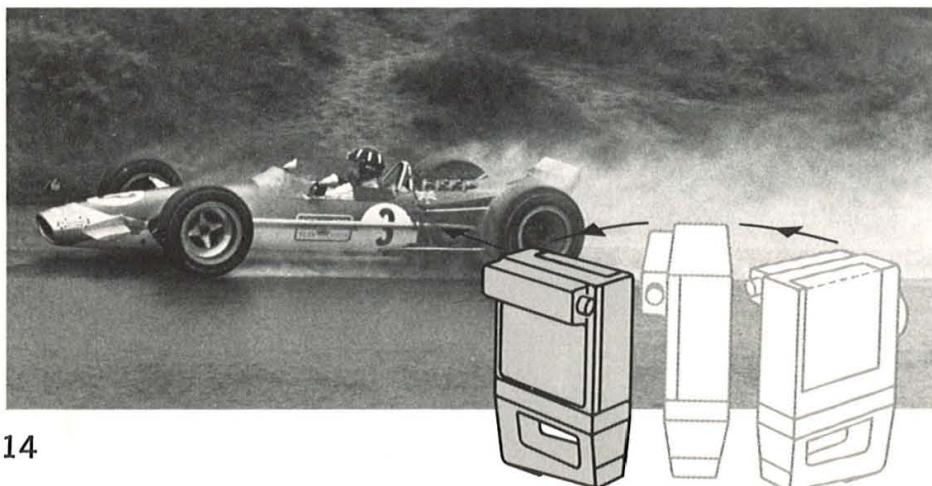

Follow a moving subject by keeping it centered in the viewfinder. The subject will be sharp, the background blurred. (See "panning," page 15.)

3. panning—“Panning” is a term that means moving the camera while you’re filming to cover an extended view. Your movies will be more enjoyable if you keep panning to a minimum. When panning is excessive or too fast, subjects and backgrounds are blurred and seem to race by on the screen.

By holding your camera still for most of the time, you can make movies with the “professional” touch—ones that are easy on the eyes, and more fun to see. “Pan” only in rare instances. Whenever possible, try to photograph a wide view by making a series of shots, moving the camera between takes and overlapping each scene slightly. However, in some instances, a panning shot may be desirable. The secret of a good pan is to move the camera slowly and smoothly. Stand still, hold the camera steady on the first part of the scene for a moment, pivot from the waist, and pan *slowly*. Never pan on nearby objects.

4. indoor movies—When you make movies indoors, seat your subjects midway between and slightly behind two lamps of approximately the same wattage, and the results will be quite pleasing. Scenes filmed in dining rooms with overhead lighting and including a white or light-colored tablecloth will also make attractive indoor movies. It’s also a good idea to turn on all the lights in a room while making movies.

5. batteries—If the camera stops running, clean the AA-size battery and camera contacts with a rough cloth. Have the batteries checked for their power output; replace them if necessary. To prevent interruption during movie-making, use live batteries and keep battery and camera contacts clean.

If the film-supply indicator does not advance when you have a film cartridge in the camera and the camera motor is running, check to see if the batteries are correctly installed, *with the “+” and “-” ends of the batteries matching the*

“+” and “-” on the battery compartment. Incorrect insertion of batteries will cause the motor to run slowly, backward, or not at all. *If your processed film is “black” (unexposed), check to see if the batteries are inserted correctly.*

When you go on a trip, always take along a spare set of fresh batteries. Replace batteries after about a year of use. Batteries will run fewer cartridges through the camera under cold temperatures.

6. cold-weather operation—For sound movies outdoors (temperatures below 32 F), an optional 9-volt external power supply, which plugs into the camera’s external-power jack, can be ordered from your photo dealer. This power supply “boosts” the motor batteries for extended cold-weather operation. (For correct exposure, batteries must be in the camera.) To protect the camera from cooling to temperatures below 32 F, place the camera inside your coat when you stop for scene changes.

technical details

film—Uses super 8 sound or silent cartridges.

batteries—Six AA-size *alkaline* batteries to power drive motors and automatic exposure control; one 9-volt *alkaline* battery (transistor-radio type) to power sound amplifier.

lens—KODAK EKTAR 9mm, f/1.2, 6 element, fixed-focus; built-in Type A filter; aperture range f/1.2 to effective f/36.

shutter—230° opening with exposure of 1/28 second at 18 frames per second with sound cartridges (approximately 20 frames per second with silent cartridges); cable-release socket.

exposure control—Automatic; CdS cell; low-light signal in viewfinder.

viewfinder—Optical with large aperture; blue light for low-light levels and motor-battery check; flickering red light for sound indicator; pointer for end-of-film indicator.

sound system—Built-in amplifier; 18 frames separation (picture to sound); automatic gain control (AGC) for recording; input impedance—200 to 600 ohms; maximum input voltage (other than microphone)—3 mv from 300 ohm impedance source.

construction—Metal and plastic with built-in hand grip; tripod socket; cable-release socket; microphone jack; external-power jack (for drive motors); drum-type film-supply indicator.

auxiliary equipment . . .

... see your dealer

Kodak Ektasound movie-making case—

Provides an easy way to carry the camera and microphone while making sound movies. With the microphone in the case, sounds of the camera are minimized on the sound track. (A removable tube holds the microphone securely in the case, but you can remove the tube and place it near the scene being photographed.) When you use the case, you can hold the camera with both hands for steady movies.

The case holds the camera, microphone, and two rolls of movie film. The film is held securely by two special clips. It's a convenient way to use or store your camera. (Items shown not supplied with the case.)



Kodak Ektasound camera battery pack—


Allows the addition of six AA-size batteries to "boost" the motor batteries for extended cold-weather operation (in temperatures down to approximately 20 F). Simply plug it into the camera's external-power jack.

Kodak Ektasound microphone extension cord, 15-foot—This cord extends the range of the microphone up to 27 feet from the camera. This allows you to improve your recordings by positioning the microphone in a scene at a distance from the camera, thus reducing the chance of recording unwanted background noises.

Kodak Presstape universal splicer—Easy-to-use dry splicer for super 8, 8mm, and 16mm films uses pressure-sensitive tape (KODAK PRESSTAPES) to make splices.

Kodak Ektasound 245 movie projector—

New, modern design for easy projection of your super 8 sound movies. Attractively styled wood cabinet, with a smoke-colored dust cover. Projects up to 400-foot reels of super 8 movie film in either of two directions (from the front or rear of the projector). A single projection control sets the projector for threading, forward, fast forward, still, or rewind. You can record your own soundtracks, add sound-on-sound, or erase portions of your recorded material. An auxiliary speaker jack is provided, as well as jacks for microphone and phonograph inputs. Projection speeds of 18 fps (for movies made with KODAK EKTASOUND Movie Cameras) and 24 fps (for commercial sound movies).

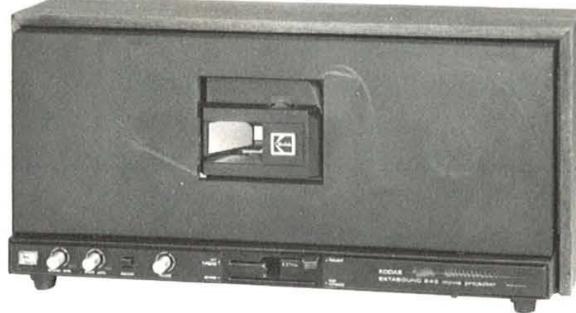

Kodak Ektasound 235 movie projector—

Similar in design to the EKTASOUND 245 Movie Projector, except it has playback *only* rather than playback/record capabilities. As with the 245 Projector, a unique projection mirror system permits you to project movies with the projector sitting on a bookshelf or a table.

Kodak projection screen (40 x 40 inches)

—Designed for use at home with your projector. The KODAK Projection Screen is made of mildew-resistant fabric with a highly reflective, glass-beaded surface for bright screen images. The screen has easy-opening legs and can be adjusted for overall height from the floor.

service facilities

If your movie camera should require service, complete facilities are provided in Rochester, as well as in Kodak Regional Marketing and Distribution Centers, at the addresses listed below.

in Rochester:	Eastman Kodak Company Central Equipment Service Center 800 Lee Road Rochester, New York 14650	
regional centers:	Eastman Kodak Company Regional Equipment Service Center	
9100 Alcosta Boulevard San Ramon, California 94583	12100 Rivera Road Whittier, California 90606	5315 Peachtree Industrial Boulevard Chamblee, Georgia 30341
1122 Mapunapuna Street Honolulu, Hawaii 96819	1901 West 22nd Street Oak Brook, Illinois 60521	1334 York Avenue New York, New York 10021
	2800 Forest Lane Dallas, Texas 75234	

warranty

Kodak has given extensive care and attention in producing your new EKTASOUND Movie Camera. Carefully follow all the instructions in this manual to get best results and to prevent damage to your equipment. If you should want help or service, we're at your call.

We will repair your camera at no charge within one year after purchase, except for damage caused by misuse or circumstances beyond Kodak's control. This warranty applies only to the camera, and Kodak cannot be responsible for other losses or damages of any kind resulting from equipment failure.

Except as mentioned above, no other

warranty, express or implied, applies to this camera.

For movie-making help, write to Eastman Kodak Company, Photo Information, 343 State Street, Rochester, New York 14650. For service on your EKTASOUND Movie Camera during or after the warranty period, contact your dealer in Kodak products or one of the Kodak Consumer Centers for assistance, or send your camera to one of the Kodak Equipment Service Centers (listed above). A note enclosed with the equipment giving details and date of purchase will help us get it back to you promptly.

Canadian Service Facilities KODAK CANADA LTD.

3500 Eglinton Avenue West, Toronto, Ontario M6M 1V3

1225 East Keith Road, North Vancouver 3, B.C.

2, Place du Commerce, Ile des Soeurs, Montreal 201, Quebec



KODAK
Films See Things
Your Way



Canadian Service Facilities KODAK CANADA LTD.

3500 Eglinton Avenue West, Toronto, Ontario M6M 1V3

1225 East Keith Road, North Vancouver 3, B.C.

2, Place du Commerce, Ile des Soeurs, Montreal 201, Quebec

KODAK, EKTASOUND, SONAR, EKTACHROME, KODACHROME, TRICOLOR, EKTAR, PRESSTAPE

EKTAR, and PRESSTAPE are trademarks.

Consumer Markets Division

Pt. No. 635141
3-73-CX

Printed in the United States of America